

How to use Popcorn Machine

You need:

1. Popcorn machine with scooper
2. Popcorn packets (contains the popcorn kernel, butter, and salt, which makes it easy)
3. Popcorn bags



Setup:

1. Place popcorn machine on a level surface.
2. Have popcorn packets and the bags ready to be used.



Making Popcorn:

1. There are three switches at the top of the machine. The first button would be the heat switch, the second button is the motor and the third button is the heat lamp that keeps the popcorn warm. Turn them all on.
2. Add the popcorn packet to the popcorn machine kettle.
3. Let the popcorn heat up and pop. Once you hear very few kernels popping, carefully dump the kettle so that the popcorn is removed.
4. Turn the heat button off if you're not planning to make any more popcorn. If you don't the popcorn will burn and machine will begin to smoke and people will be concerned.
5. Scoop popcorn into bags and serve.



Cleanup:

1. Turn off all the buttons and unplug the machine.

*****Note: The kettle is around 400 degrees so be very careful handling, use oven mitts or lots of paper towels so you do not get burned.**

2. Unplug and remove kettle by turning kettle, as if you were dumping out popcorn, and lift it off its holder. Either let the kettle sit to cool down.
 - a. Once cool, clean out all the remaining oil and butter so that it is ready to be used for next event.
 - b. Place kettle back in machine and plug back in.
3. Wipe out the entire machine so that no popcorn, butter, or oil remains. The metal basin can be removed to be wiped out as well.

*****Note: Be careful handling the doors on popcorn machine because they break easily.**

4. Wipe off scooper and place back inside machine.
5. Place the popcorn machine in the proper place in the trailer.